

### Step 1:



Remove assembly from portable, wheeled storage bag. Grab corner legs in each hand. Lift frame slightly off ground. Stepping backwards, pull frame apart until your arms are fully extended.

### Step 2:




Unfold cover. Place cover over frame. Align corner pockets of cover over frame legs.


### Step 3:



Do not place hands between frame tubes. Push up until canopy is fully opened.

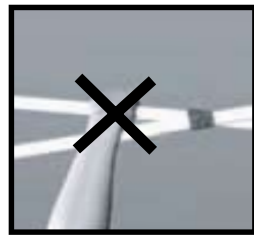

### Step 4:

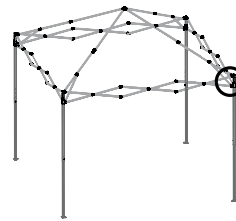

Slide corner brackets up until button snaps into place.


SHOWN WITHOUT COVER FOR CLARITY



### Step 5:



Pull corners down snug, attaching hook and loop fasteners. Secure cover fasteners around top roof frame.

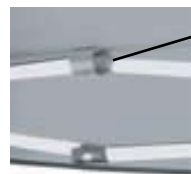


COVER FASTENER

### Step 6:



Slide legs to desired height, making sure buttons snap into place.

### Step 7:

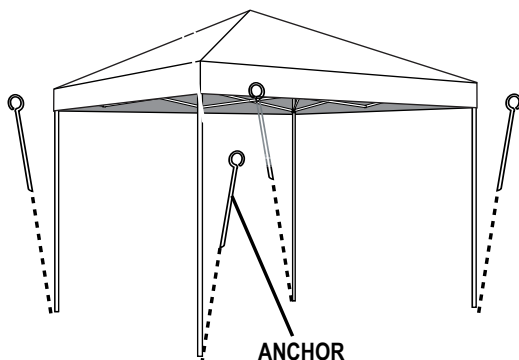

For temporary anchoring of canopy on grass, dirt or packed soil, insert temporary spike anchors through corner feet.

**CAUTION: Temporary spike anchors are NOT designed for permanent installation. Never leave canopy unattended.**

For all PRO SERIES™ straight leg Pop-Ups, legs should be square and straight when temporary spike anchors are inserted through corner feet.

For assembly questions, Please call Customer Support: **1-800-524-9970** or in CANADA: **1-800-559-6175**